

R - ATTENTION!
GB - WARNING!
D - ACHTUNG!
NL - WAARSCHUWING!
E - ¡ADVERTENCIA!
P - ATENÇÃO!
I - AVVERTENZA!
DK - ADVARSEL!
S - VARNING!
FIN - VAROITUS!
N - ADVARSEL!
H - FIGYELMEZTETÉS!
CZ - UPOZORNĚNÍ!
SK - UPOZORNENIE!

PL - OSTRZEŻENIE!
BG - ВНИМАНИЕ!
RO - AVERTISMENT!
GR - ΠΡΟΕΙΔΟΠΟΙΗΣΗ!
SI - OPOZORILO!
HRV - UPOZORENJE!
TR - UYARI!
RUS - ВНИМАНИЕ!
ET - HOIATUS!
LT - DĖMESIO!
LV - UZMANĪBU!
! تنبيه - AR

★+3

 
ans
years
Jahre
jaar
años
anos
anni
år
år

vuotta
är
év
let
rokov
lata
години
ani
χρόνια
лет



let
godina
yaşından
лет
roki
aastastele
metų
gadiem
سنوات



x1

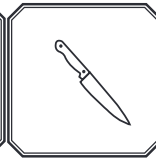










Smoby










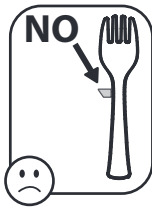 
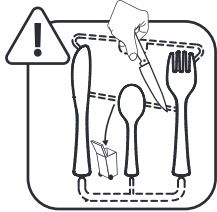 


F - Outils non fournis
GB - Tools not provided.
D - Werkzeug nicht inbegriffen
NL - Gereedschap niet inbegrepen
E - Herramientas no incluidas
P - Ferramentas não fornecidas.
I - Utensili non forniti
DK - Værktøj medfølger ikke.
S - Verktøy ingår inte.
FIN - Ei sisällä työkaluja
N - Verktøy følger ikke med
H - A szerszámok nem tartozéka a terméknek.
CZ - Nářadí není součástí dodávky
SK - Nariadenie nie je súčasťou dodávky

PL - Narzędzia niedostarczone w zestawie.
BG - Инструменти не са предоставени.
RO - Scule neincluse
GR - Τα εργαλεία δεν περιλαμβάνονται
SI - Orodje ni priloženo.
HRV - Alati se ne isporučuju
TR - Ürüne dahil değildir
RUS - Инструменты не поставляются.
UA - Інструменти не входять у комплект
ET - Tööriistu ei ole kaasas.
LT - Įrankių komplekte nėra
LV - Rīki komplektā nav ietverti.

         •AR الأدوات غير مُرفقة مع المنتج.

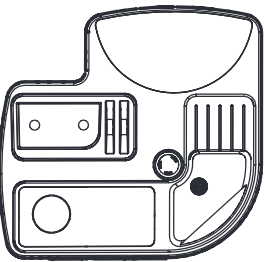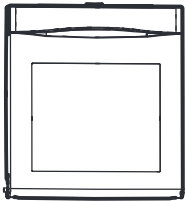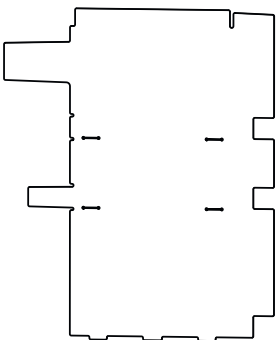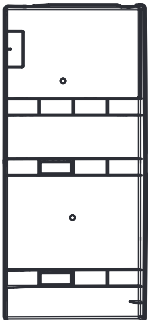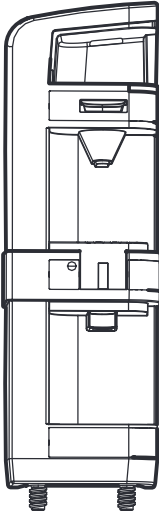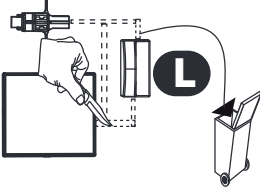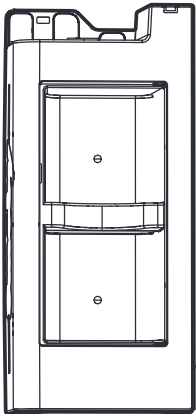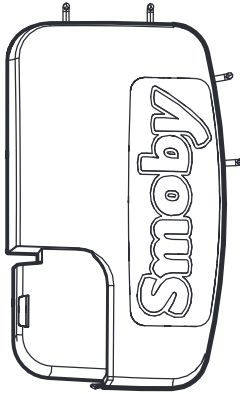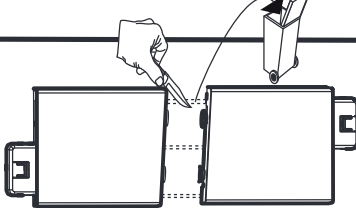A  I14121	x1	E  I14125	x1	J  AAP1941	x1
B  I14120	x2	F  I20069	x1	K  I14138	x1
C  I17049	x1	G  x1	x1	N  I14129	x1
D  I14123	x1	H  I14122	x1	P  I14127	x1

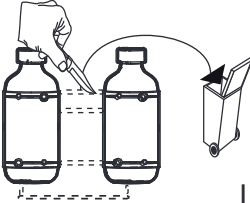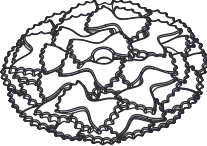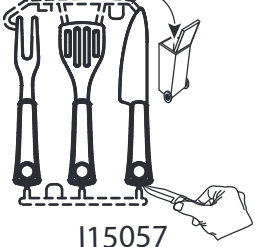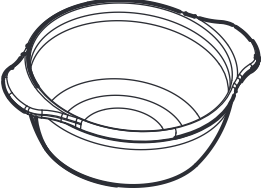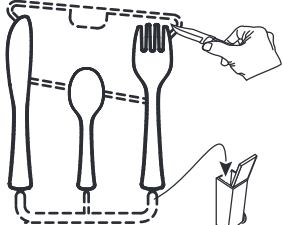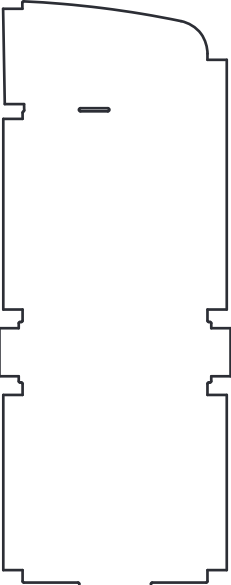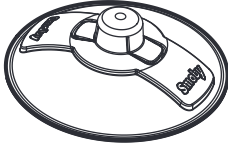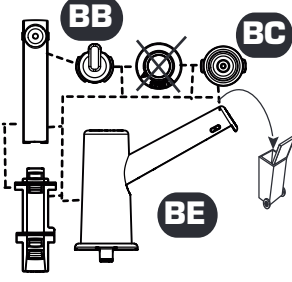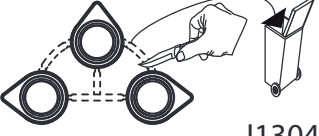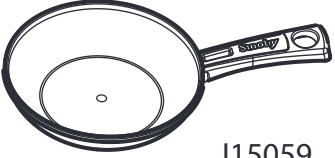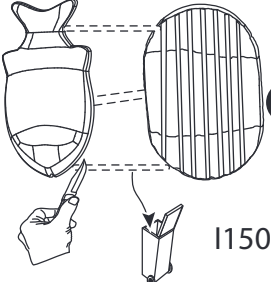           R	 I14146	x1	AD	 I15055	x1	AG	 I15057	x1
S	 AAV0102	x1	AE	 I12038	x1	AH	 I15056	x2
T	 I17019	x2	AF	 AAP2467	x1	AI	 I15054	x1
U	 OUT3547	x2				BA	 I19065	x1
V	 AAK2007	x1				BD		
Z	 I13048	x1						
AA	 I15059	x1						
AB	 I15051	x2						

⚠ WARNING: CHOKING HAZARD.

Small parts. Not for children under 3 yrs.

⚠ WARNING:

Never allow a child to play without adult supervision.

 
⚠ WARNING:

Toy must be assembled by an adult, as it contains hazardous points or edges. A sharp tool shall be used.


⚠ WARNING:

Batteries should be changed by an adult.
Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
Do not mix old and new batteries.


1

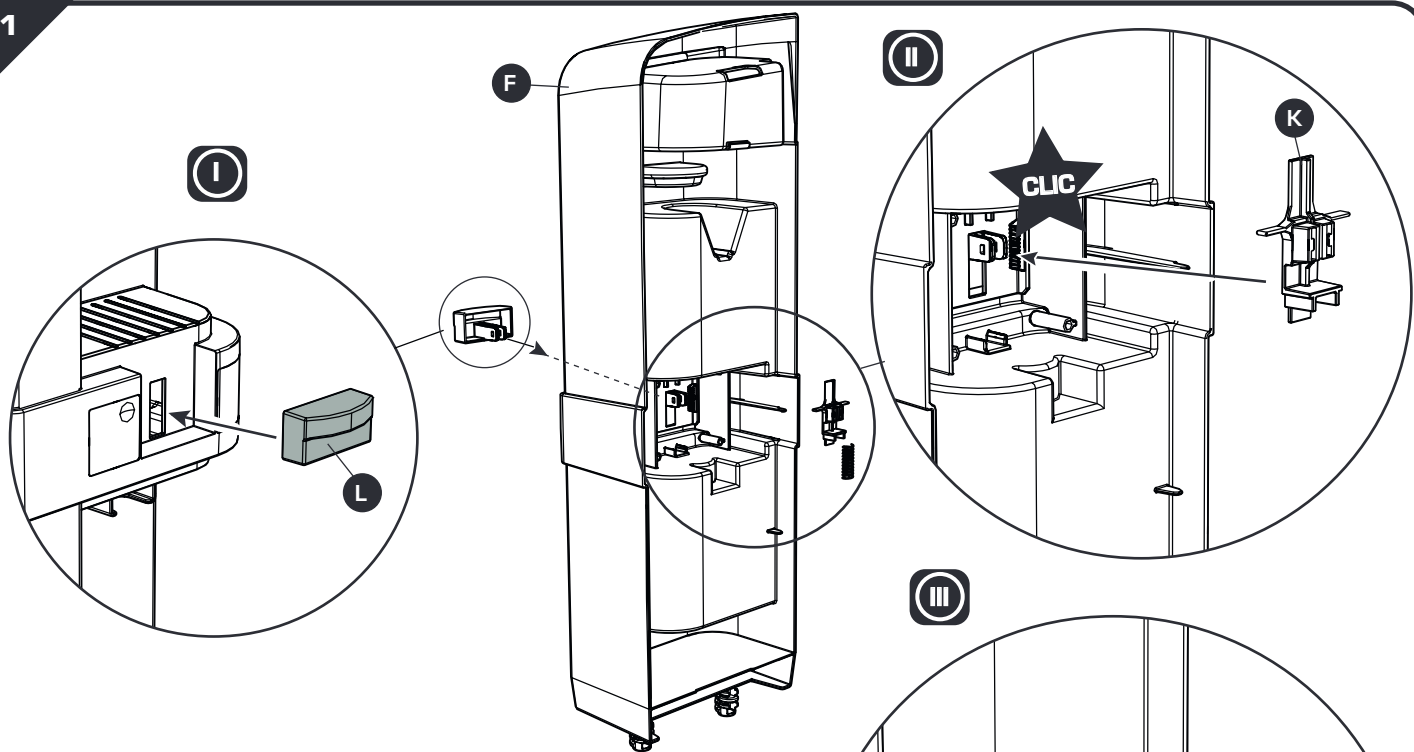


2

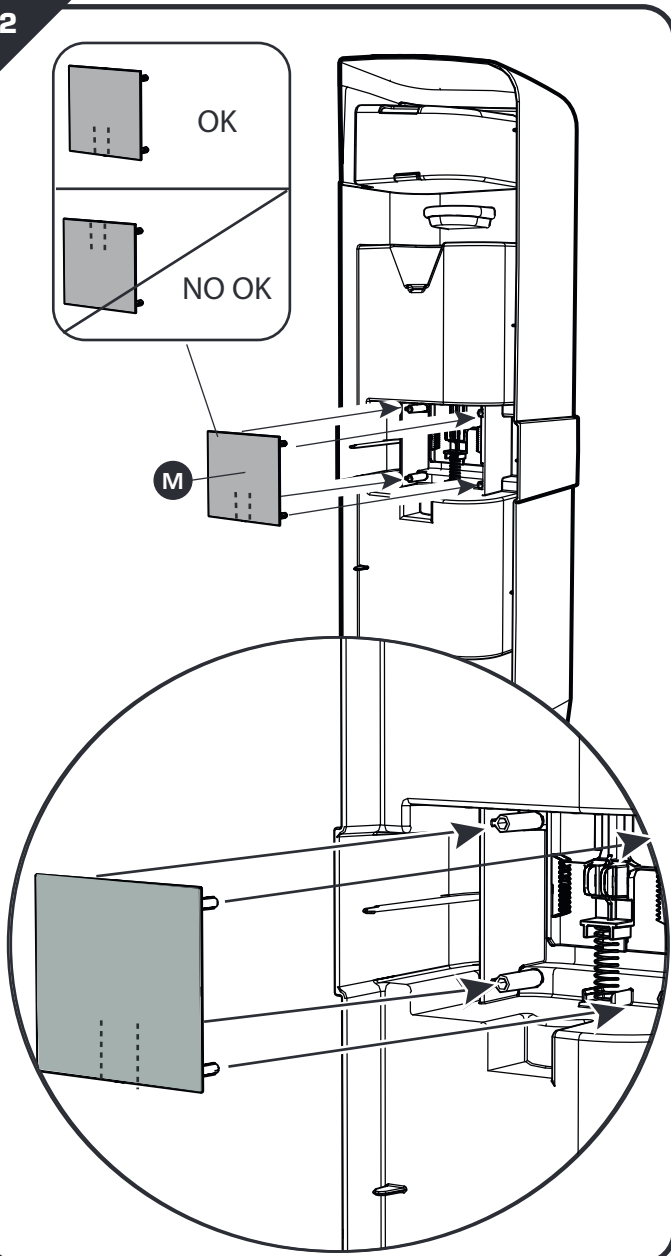 


3

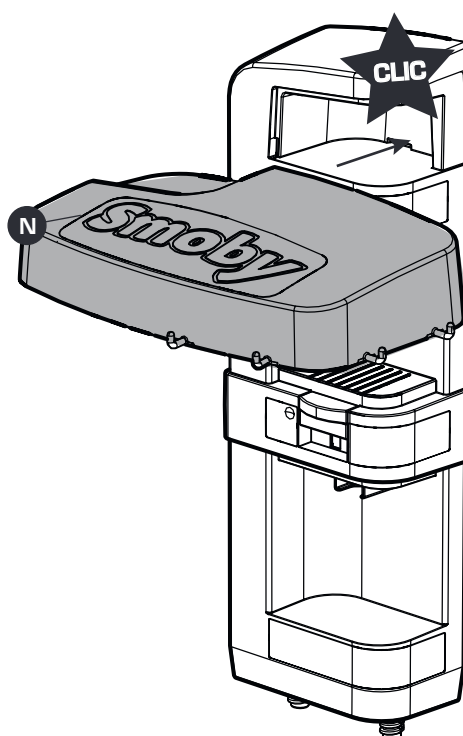 


4

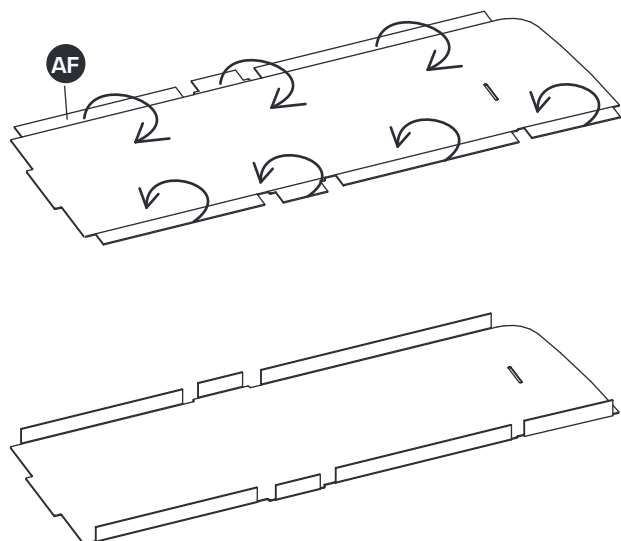 


5

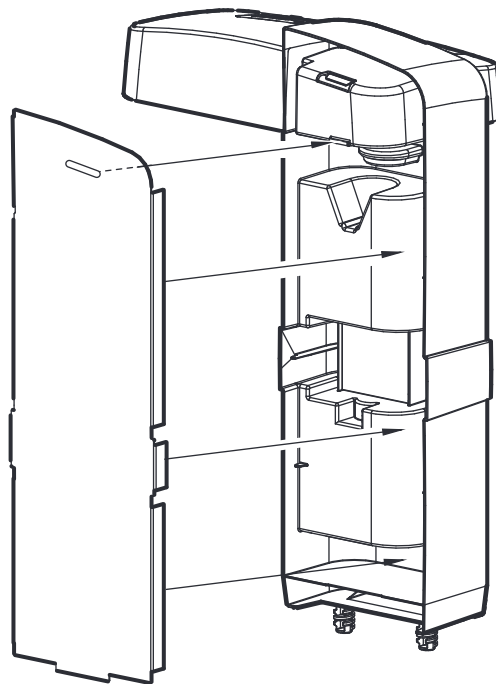 


6

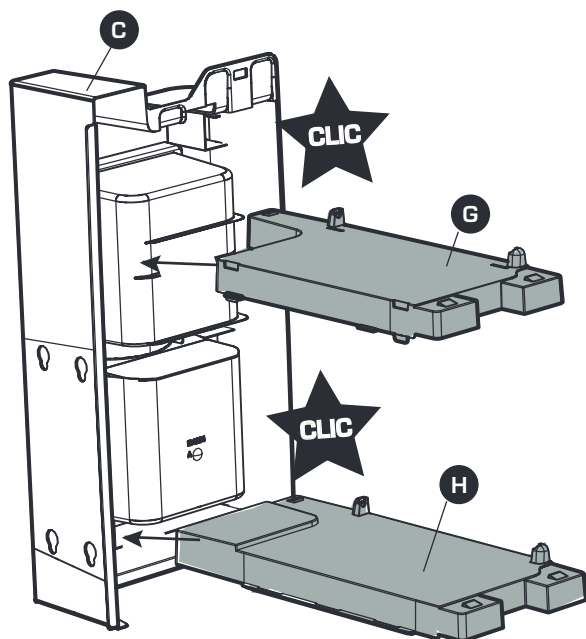 


7

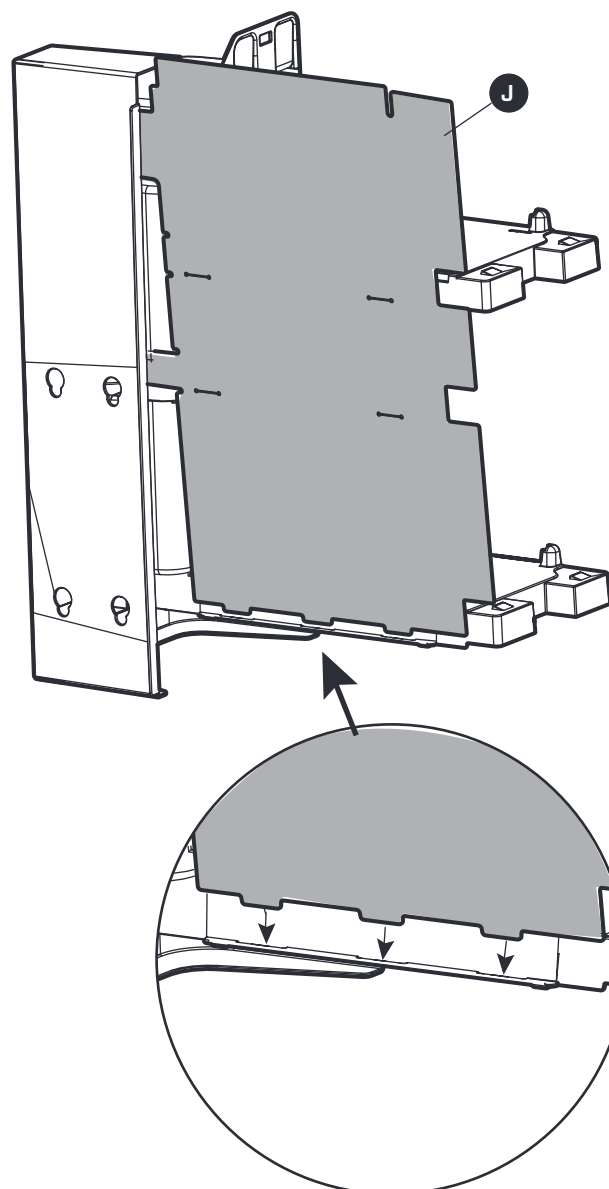 


8

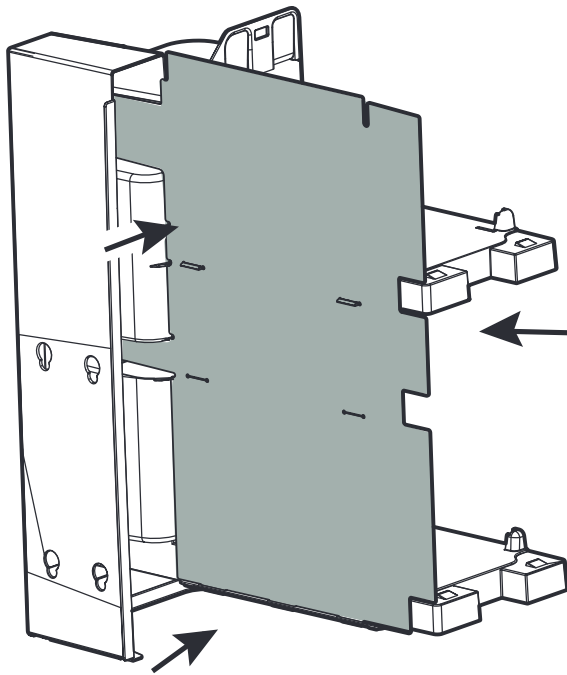 


9

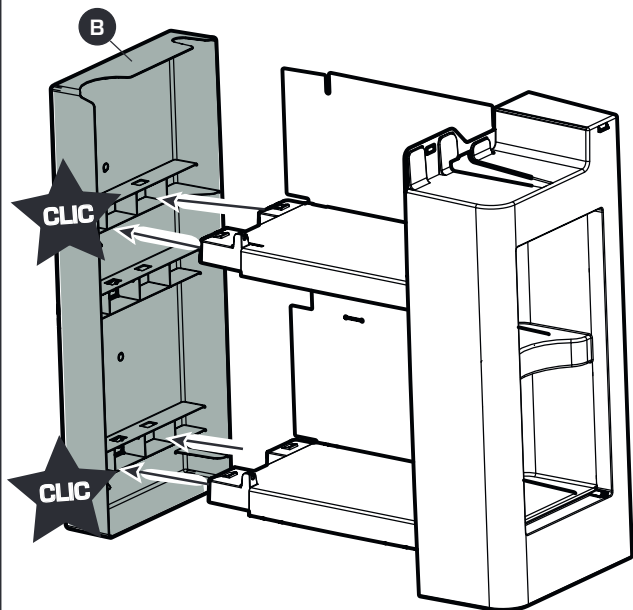 


10






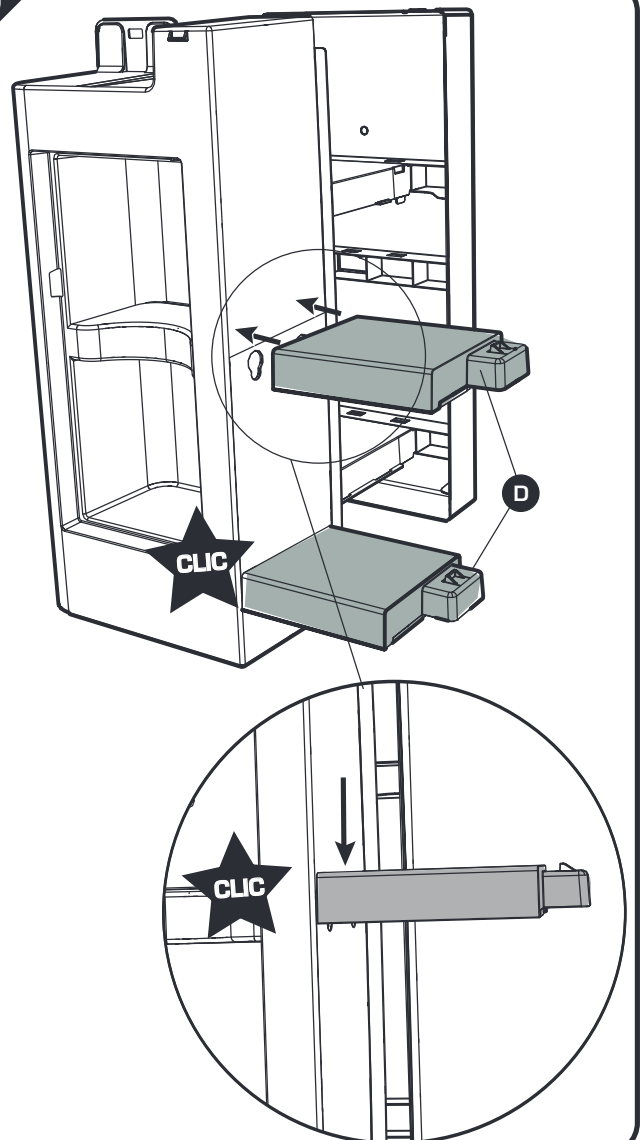 


11

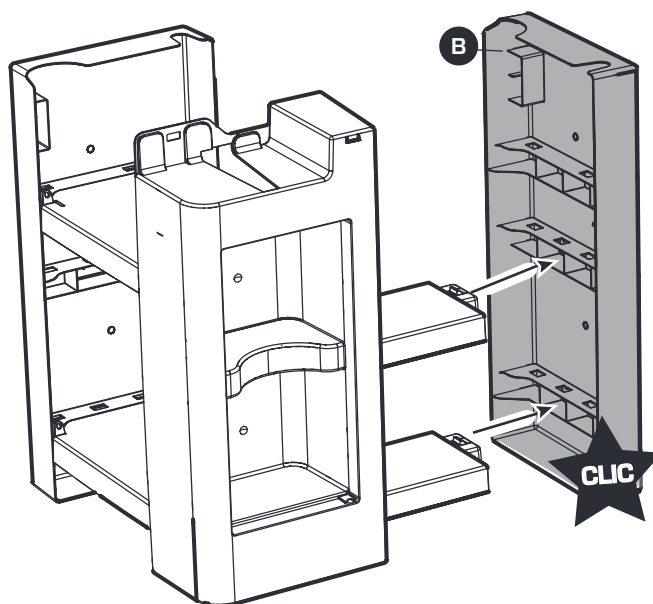 


12

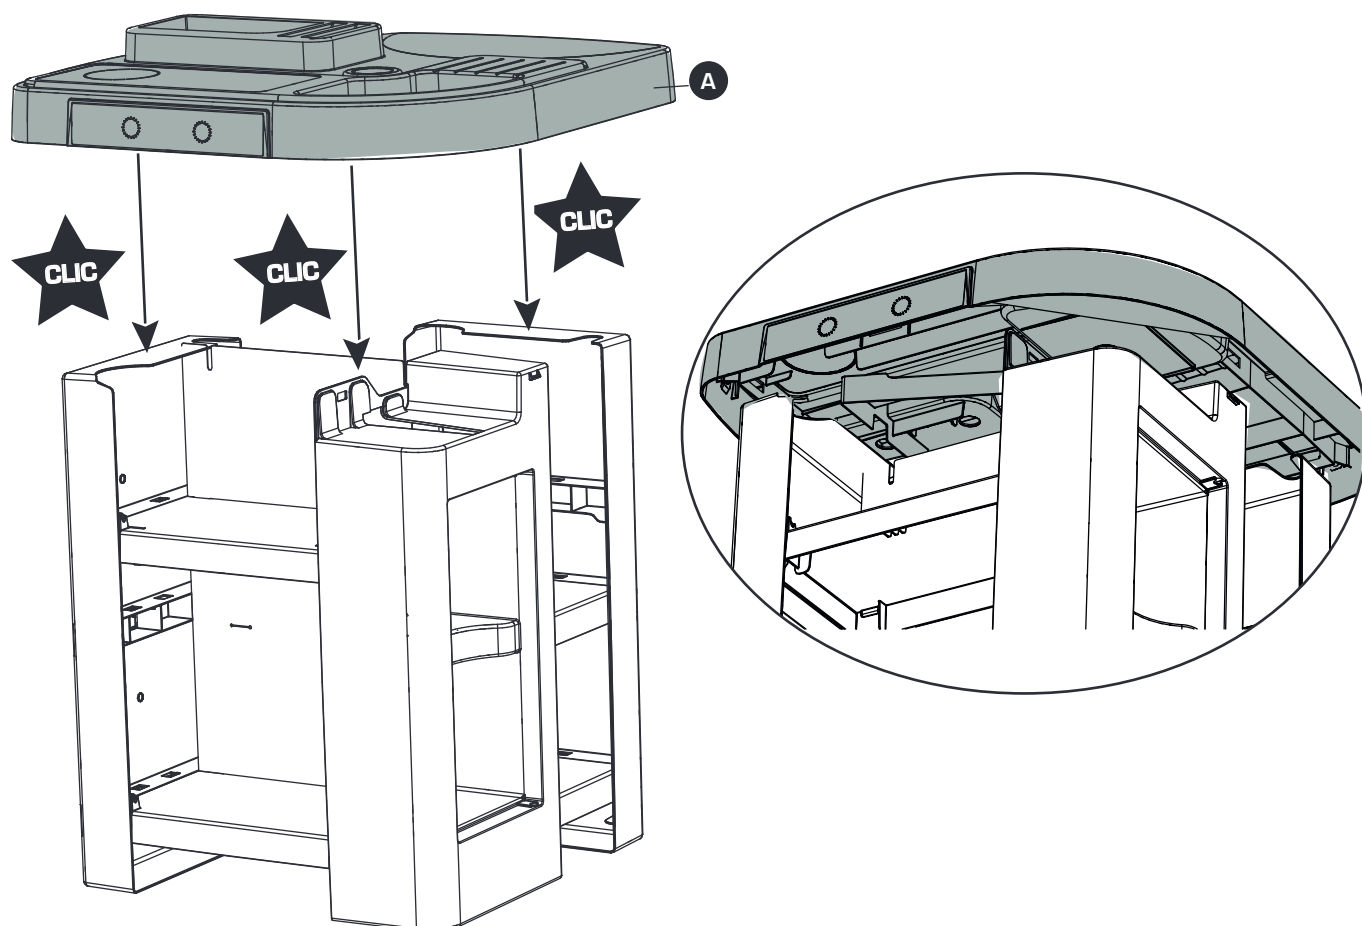 


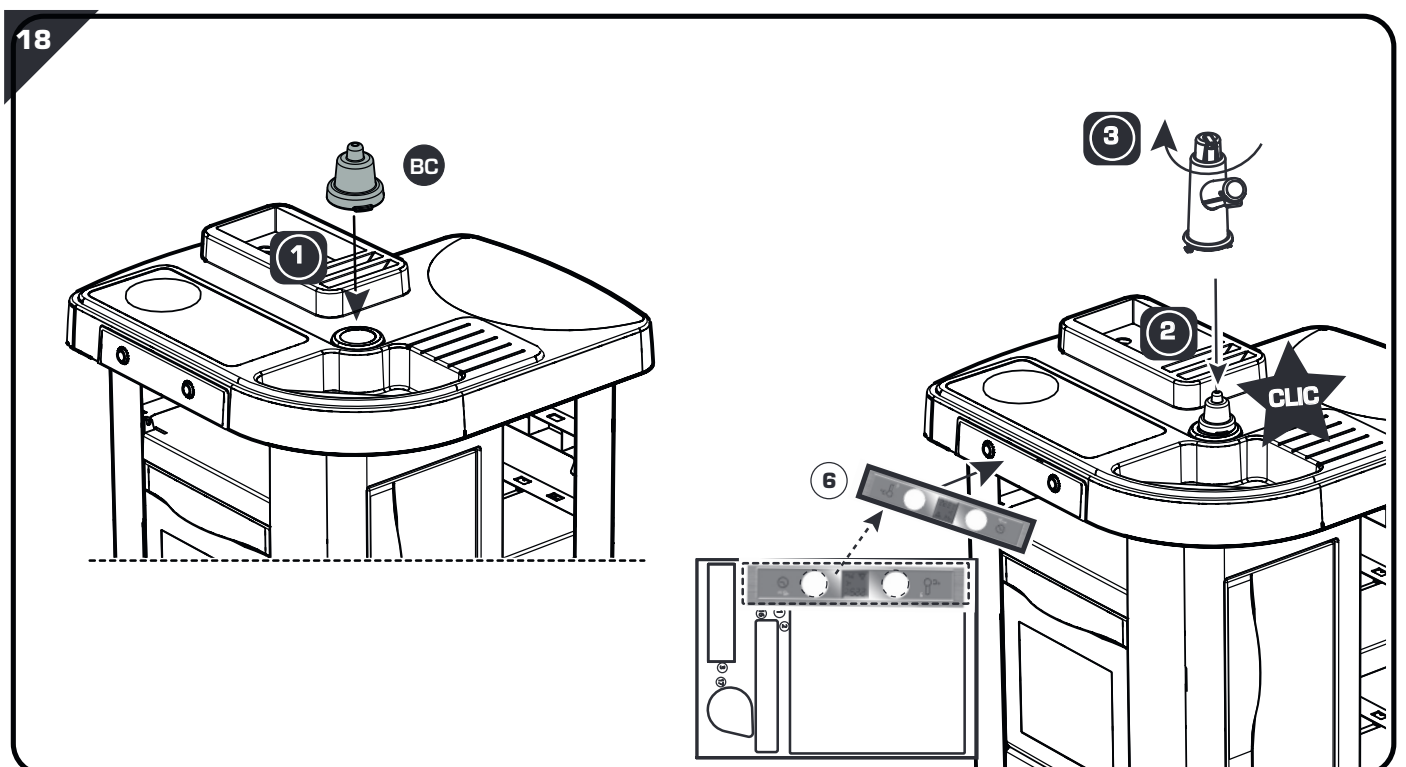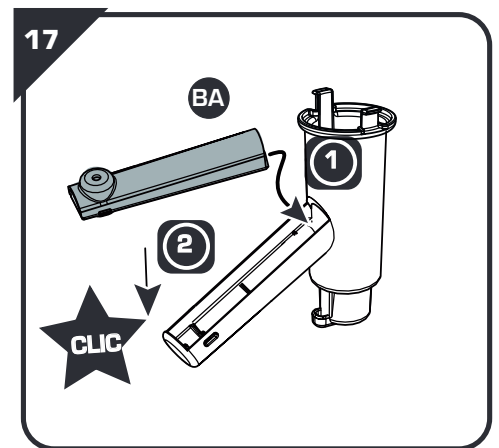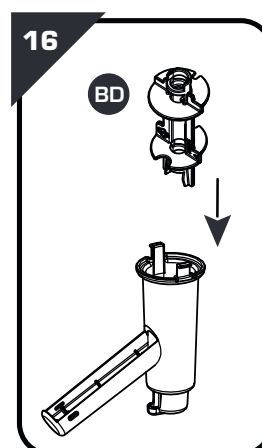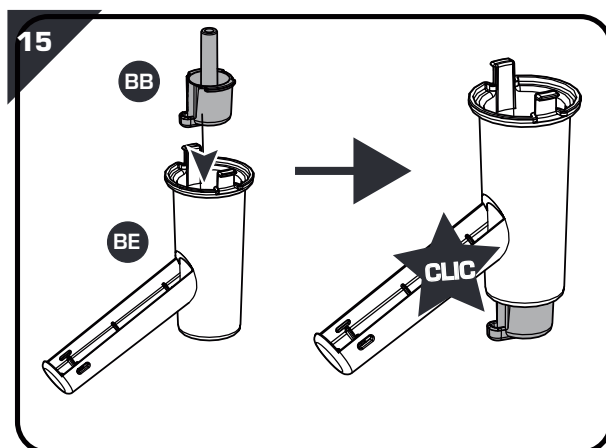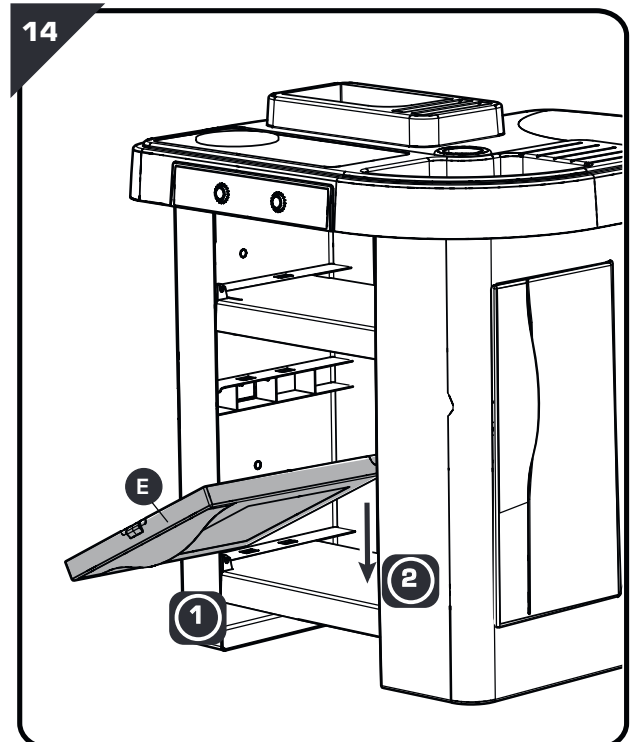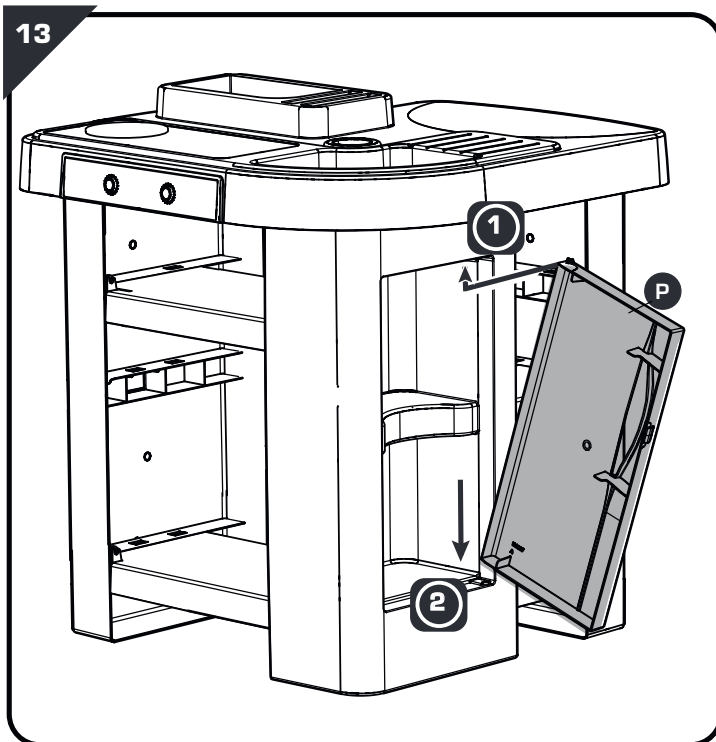      



19

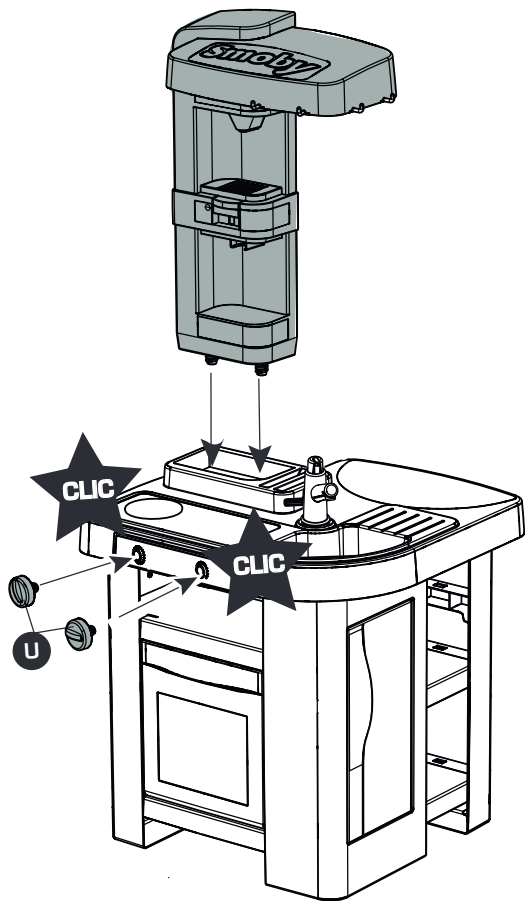 


20

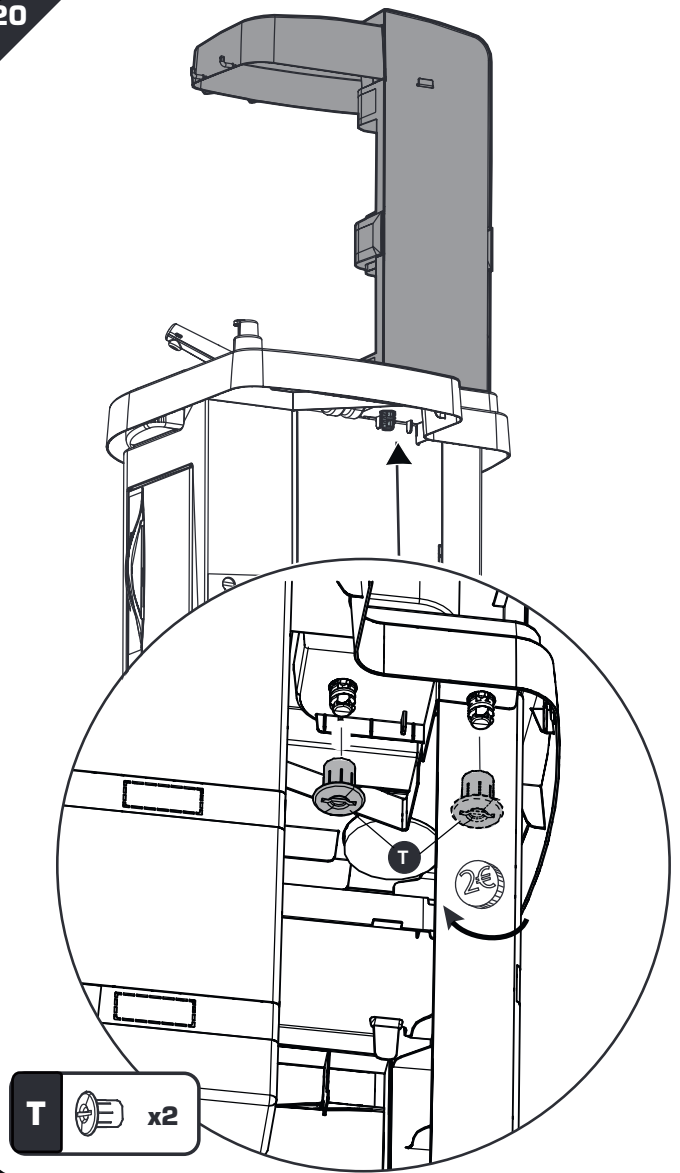 

I

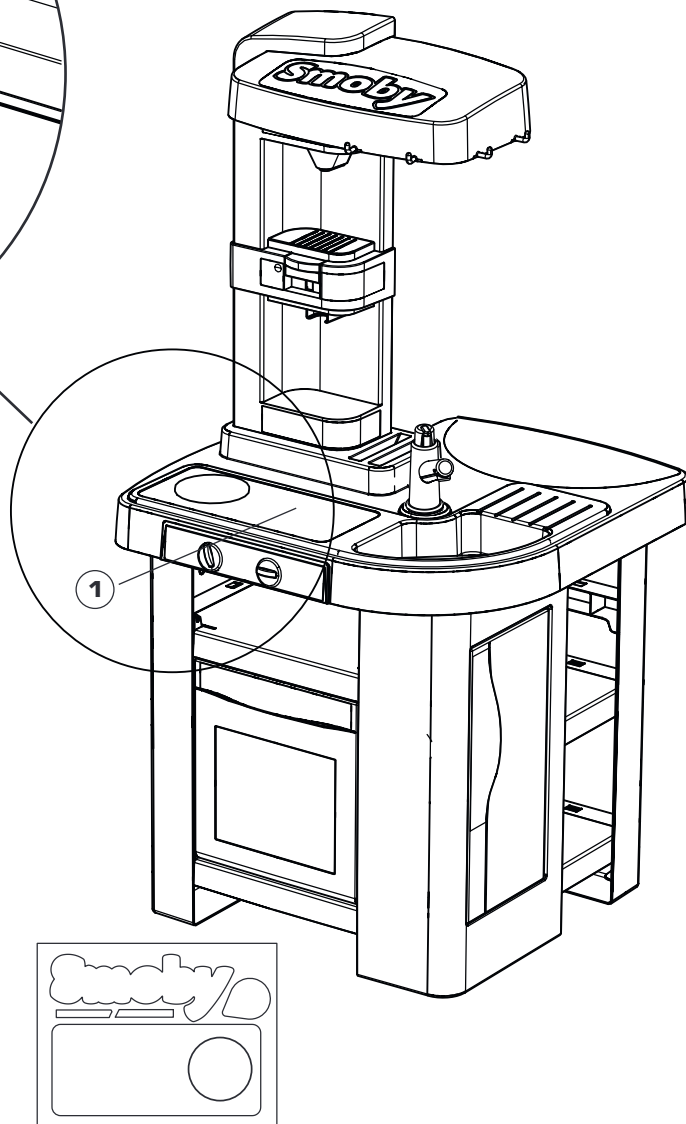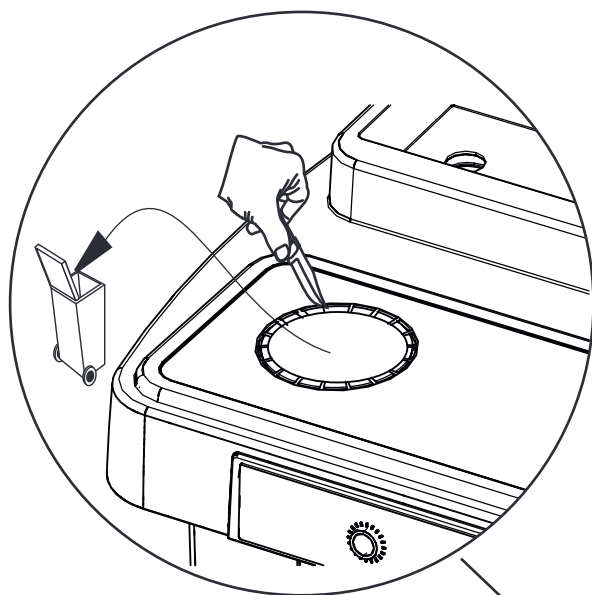  

II

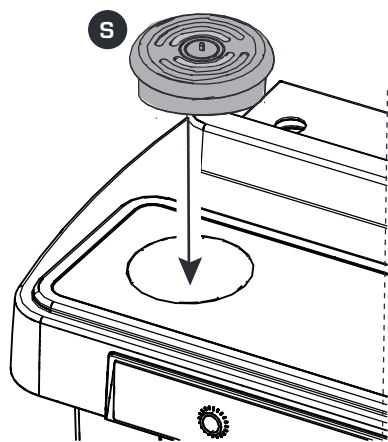 

III

